## Uso de la Utilidad Wireless en Windows XP

Existen dos maneras de configurar la tarjeta PCMCIA Wireless LAN en Windows XP. Una es haciendo uso de la **Utilidad Wireless LAN**; la otra es mediante la **Configuración de Red Wireless de Windows**. Para escoger entre una de las dos, usted tendrá que habilitar o deshabilitar la Configuración de Red Wireless de Wireless de Windows.

## Habilitar la Configuración de Red Wireless de Windows

- 1. Click con el botón derecho del ratón en el icono de la Utilidad Wireless y pulsar Exit.
- 2. Hacer click en el icono de Configuración de Red Wireless de Windows.



🎋 🙀 📥 🏡 1:37 PM

7:44 PM

Show Config Utility

Windows Wireless Network Configuration

3. Pulse el botón Avanzada.

errect to Wireless Netwo	H 🛛
The felenang network of are ave	skille To access anetwork, rele
THE PART AND PARTICICULE	resect
Analable petricoltz	
1 wreless	
	n official (an OAL) . The survey are with 2 weight
r yn an hwrg difnity soan	cting to a network, click dolvance
jdranced.	Canol
gdwood.	Correct Carcol
Advanced Wite less, Network Conne	Connet Cancol
Alteriors Mitweek Constants	Connett Cancel
Advanced. Mitteless Horward Golffer Interal Vertice February A	Connet Cancel
Advanced. With less Mittwork College and all Minister Relation A Riber Alaboration to configure at	Conner Cancel class 1   Properties Pranted genetics/retroit.seting
Advanced. Wite less Mitwark Conne ment] Merice Teterate  A	Correct Cancel Clien 1   Properties  Pressed p
gdwood Nito kus Mitwo is Cotto Gaseal Vienes Network ja 12 Use gelates is configure a 14 october genatic Transmittion a confiderer	Canoni Classific Canoni Classific Canonica Presson Presson Presson Conference Presson Canonica Presson Contre Contr
Afforder With the Afford Afford Market Market Afford Market Stands A Market Stands A Towner is an and down a wideo	Clean 18 Properties 2010
Advanced Wite less Mittao Is Co Lao Langa Warks Tabula A 20 De glados to colgar a Archite grant a Ta concel to a collidre a solida	Canon
Afforment Mitro Res Mitros & Cotton Samuel Marines Resource (A Mitros Mitros & Cotton Mitros (A) Another presents Another presents Another presents Determing resents	Clen 18 Properties
Attracted Attract Mitwo & Cotton and Minist Results A Mitwo Minist Results A Mitwo Ministry Annual 1 Tracement is an availation Automatic results 1 Automatical results 1 Autom	Clence Cencer clence Properties

Asegúrese que "Usar Windows para configurar mis parámetros de red wireless" está marcada y pulse OK.

Nota: Para más detalles sobre como usar la configuración de red wireless de windows, vaya a la ayuda on-line de Microsoft Windows XP.

## Deshabilitar y Usar la Utilidad Wireless LAN

- 1. Hacer click en el botón derecho del ratón sobre el icono de la Utilidad y pulsar Exit.
- Exit 🕉 🕵 🔒 1:37 PM

2. Hacer click en el icono de Configuración Wireless LAN de Windows.



Windows Wireless Network Configuration

- Adl.

Show Config Utility

3. Pulsar el botón Avanzada.

Asegúrese que "Usar Windows para configurar mis parámetros de red wireless" no está marcado y pulse el botón OK.

Connect to Wirelaw	Hotwork	28
The fallowing excerted	an malater Totaline	LANNING, 14852
President antional a	And Carried	
1 Senters		
20000000		
States States		
1111111		
I passes having difficulty	pormeting to protect	A. UKA Kérarceá
-	-	100000
(advance)	Correct	Cancel

east ve	mittan S eksishi	Advanced	
Use his	dove, to config	AT REAL PROPERTY.	netwok settingil
Auroidade y	provant s		
1.00			E-Oper
1000			
B	errad i de constant is	1001/16	and a fear while in such
Baseral	<del></del>		inter the solutions ( . Manager ( . Manager
Batand	erend a de connect de		in to show

Pulse Inicio→ Programas→IEEE802.11b WLAN Card Utility para reiniciar la Utilidad de la tarjeta WLAN.

La Utilidad Wireless LAN aparecerá. Doble click en el icono para abrir la Utilidad.

Pulse el botón Re-Scan para comenzar con la Utilidad Wireless. El proceso para configurar la tarjeta PCMCIA aparecen en el Manual de Usuario que se incluye en el CD-ROM. Wireless LAN Utility

ETEB02.115 WLAN USB Adapter Utility	2
Unk Info Configuration   Site Survey   Enception   Advance	ed boot
State Disconnected	
Current Charged	m
Elarwet TransferPiele - Mbps	
Cartent Service Set I devider	
Throughout (Byten/Second) Terrorified Received	
Link Quality	
Signal Shangh	
at 1 6 4 1	1445

🛓 🐔 🍢 🏡 7:50 PM